

QUICK REFERENCE GUIDE

Kangaroo™ Joey enteral pump loading and feeding set rinsing



- A.** Distal end of feeding set
- B.** Feed only feeding set
- C.** Feed and flush feeding set
- D.** Pump

Do not use feeding sets for longer than 24 hours.

Proper loading and unloading of feeding pump



1. Grasp thumb tab on valve and insert into left pocket — ensure valve is fully seated. Thumb tab should align with slot in blue door.



2. Grasp black ring retainer, gently wrap tubing around rotor and insert retainer directly into right pocket. **Do not overstretch tubing.**



3. To properly unload a pump set, power off the pump and wait 10 seconds before removing the feeding set.

Proper rinsing of feeding set



1. Disconnect feeding set from patient before rinsing. The feeding set must remain loaded during the rinsing procedure.



2. CAUTION — If set is removed from the pump while in operation, it may damage the set and prevent use, negatively affecting the system accuracy.



3. Empty contents of feed bag.



4. Fill the feed bag with water to approximately half of the total capacity. Properly seal the bag and shake for 5 to 10 seconds.



5. Empty the feed bag and repeat the last step until the bag contains clean water.



6. Power on the pump. Select “Keep Settings” to continue with previous setting or “Clear Settings” to start programming new pump settings.



7. Press the “Prime Pump” button to enter the “Prime Pump” screen.



8. Press and hold the “Hold to Prime” button until only clean water flows through the tubing. Once the rotor starts this takes between 1 and 2 minutes.



9. Empty bag of water. Prime to remove any remaining water from the feeding set.



10. CAUTION — For proper accuracy, the fluid level in the feeding set bag must be 6 inches above the top of the feeding pump when the feeding cycle is initiated.

For additional operations and information, see the Operating Manual for the Kangaroo™ Joey Enteral Feed and Flush Pump with Pole Clamp, Programmable