

#### **SPECIFICATION DATA** PERSONAL AMPLIFIER

1-on-1 Conversations • TV Listening • Listening in the Car • Small Groups and much more

# PKT 2.0 Pocketalker® Personal Amplifier





The Pocketalker® 2.0 amplifies sound clearly and easily for better understanding.

© 2017, Williams Sound, LLC MCAT 208B


# Pocketalker® 2.0 Personal Amplifier

### **Personal Amplifier Model PKT 2.0:**

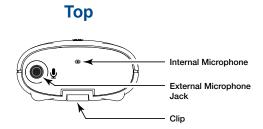

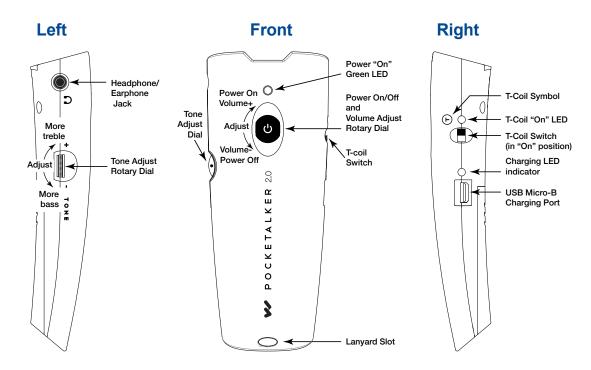

### **Back**

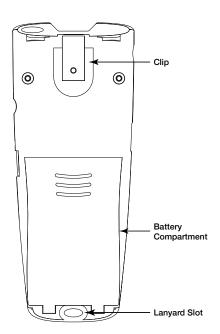

# Pocketalker® 2.0 Personal Amplifier

### **Personal Amplifier Model PKT 2.0:**

Dimensions:	4.9" L x 2.0" W x 1.0" H. (124mm x 51mm x 25mm) (Not including clip or microphone
	assembly)
Weight:	3.1 oz. (88 grams) (with batteries)
Color/material:	, , ,
*Battery Type:	
	rechargeable*
	(Williams Sound BAT 010-2 Alkaline or BAT
	022-2 NiMH recommended)
Alkaline	,
batteries:	, , ,
battorios.	Low Battery Indicator: Power "On" Green light
	on front panel flashes.
NiMH	·
rechargeable	, ,
batteries:	
	End of Charge: Red LED is on solid. At end of
	charge, maintenance charge is provided.
	NOTE: Charging requires optional charging kit
	BAT KT8.
Microphone:	
	(micro-electro-mechanical system).
	Optional External, omnidirectional, plug-in
	electret microphone with foam windscreen and
	3.5mm mono plug (MIC 014-R).
	Internal with on/off switch and LED indicator.
	l <b></b>
Tone Control:	,
	adjust high/low frequency to optimize hearing.
***Balance	adjust high/low frequency to optimize hearing.
***Balance Control:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance
***Balance Control: Power/Volume	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with
***Balance Control: Power/Volume Control:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.
***Balance Control: Power/Volume Control: Microphone	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug.
***Balance Control: Power/Volume Control: Microphone Jack:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC;
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***:
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 /
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 / HED 021, HED 027 / NKL 001 (mono)
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket.  Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 / HED 021, HED 027 / NKL 001 (mono) Neckloop
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional Accessories:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket.  Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 / HED 021, HED 027 / NKL 001 (mono) Neckloop Charging Kits: BAT KT8 (International)
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional Accessories:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 / HED 021, HED 027 / NKL 001 (mono) Neckloop Charging Kits: BAT KT8 (International)
***Balance Control: Power/Volume Control: Microphone Jack: Headphone Jack: Optional Accessories:	adjust high/low frequency to optimize hearing.  Adjusts Left/Right Volume Balance  External rotary volume control knob with integrated power ON-OFF switch.  3.5 mm, stereo mini plug. Tip=Mic signal, Ring=NC, Sleeve=Gnd.  3.5 mm, stereo mini plug. Tip=Left/Mono, Ring=Right, Sleeve=Gnd.  Clip: CLP 014; Allows the user to clip MIC 014 to clothing such as a lapel or shirt pocket. Lanyard: RCS 003; Allows user to wear unit around the neck, or as a wrist strap.  3.5mm-3.5mm Extension Cord: WCA 007 WC; extends an external microphone to 12 ft.  Stereo Earphones / Headphones / Neckloop: EAR 042 / HED 024, HED 036 / NKL 001-S (stereo) Neckloop  Mono Earphones / Headphones / Neckloop***: EAR 013, EAR 008, EAR 022, EAR 041 / HED 021, HED 027 / NKL 001 (mono) Neckloop Charging Kits: BAT KT8 (International)

Electrical Specifications (1 kHz Sine Wave reference) Typical			
52 mW (max) into 32 ohms (Stereo)			
Automatic Level Control; Limits maximum			
output level			
1% THD (max)			
63 dB @ 2.5 kHz (Tone=High)			

Frequency resp	oonse
Tone Control	
at high	2.7dB boost at 5 kHz, 6.7dB cut at 400 Hz.
position:	
Tone Control	
at mid	0.6dB cut at 5 kHz, 2.9dB cut at 400 Hz.
position:	
Tone Control	
at low	2.0dB cut at 5 kHz, 3.0dB boost at 400 Hz.
position:	

## SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

- \*Battery switch must be in correct position for battery type being used.
- \*\*Charging requires optional charging kit BAT KT8 (International).
- \*\*\*When using mono earphones, headphones or neckloop, the balance control on the Pocketalker must be turned fully counter-clockwise (to the "mono" position) for best volume and battery life.

The Pocketalker is not sold, advertised, or intended for use as a personal hearing aid. Williams Sound recommends that any individual experiencing hearing loss be examined by a physician/audiologist to determine the cause before using an amplification device such as the Pocketalker.

Acoustic Specifications for Headphones recommended for use with the Pocketalker are published on our website.

Note 1: CE approval does not apply if product does not display the CE mark.

Note 2: RoHS2: Directive 2011/65/EU Note 3: WEEE: Directive 2012/19/EU

This product is covered by the European directives above, including amendments, concerning Waste Electrical and Electronic Equipment (WEEE). Recycle the product and its accessories according to national regulations.





# Pocketalker® 2.0 Personal Amplifier

### Acoustic Specifications: Typical values in dB SPL (ANSI S3.22-1987)

### Lightweight stereo headphone, HED 024: (with 6cc coupler)


Test	Tone High	Tone Mid	Tone Low
SSPL90 (Max)	132.2	132.1	131.9
HF Ave (SSPL90)	124.0	124.0	123.9
HF Ave full on gain (60 dB)	45.2	41.7	38.6
Ref test gain	45.2	41.7	38.6

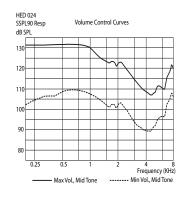


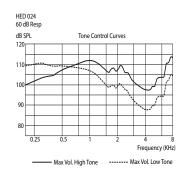

### Wide range stereo headphone, HED 036: (with 6cc coupler)


Test	<b>Tone High</b>	<b>Tone Mid</b>	<b>Tone Low</b>
SSPL90 (Max)	128.5	125.7	130.0
HF Ave (SSPL90)	123.4	123.1	124.6
HF Ave full on gain (60 dB)	44.2	40.6	39.3
Ref test gain	44.2	40.6	39.3

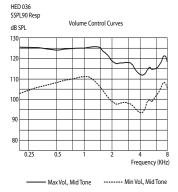


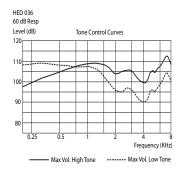

### Mini stereo headphone, EAR 042: (with 2cc coupler)

Test	Tone High	Tone Mid	<b>Tone Low</b>
SSPL90 (Max)	124.5	124.5	124.4
HF Ave (SSPL90)	118.9	118.9	118.9
HF Ave full on gain (60 dB)	39.0	35.7	32.8
Ref test gain	39.0	35.7	32.8

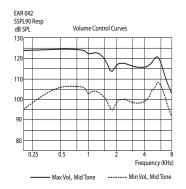

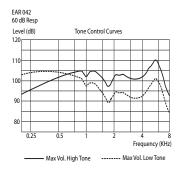

Note: The Pocketalker® 2.0 is not sold, advertised or intended for use as a personal hearing aid. Williams Sound recommends that any individual experiencing hearing loss be examined by a physician/audiologist to determine the cause before using this device.

#### NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

#### **Domestic Sales**

Williams Sound 10300 Valley View Rd Eden Prairie, MN 55344

Ph: 800-328-6190 / 952-943-2252

FAX: 952-943-2174

Email: info@williamssound.com

#### **International Sales**

International Sales Department Williams Sound 10300 Valley View Rd Eden Prairie, MN 55344 USA

Phone: +1 952 943 2252

Fax: +1 952 943 2174 Email: info-intl@williamssound.



800.843.3544 / info@williamssound.com / www.williamssound.com