

# TRITEC™ DRESSING APPLICATION

Mill

MILLIKEN HEALTHCARE


1



## Remove

TRITEC or TRITEC Silver dressing from package.  
If required, dressing can be cut to size.


2

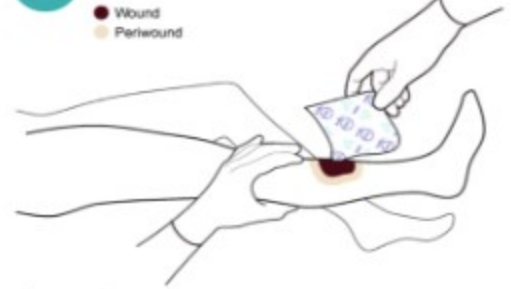

## Apply

TRITEC with printed side of dressing away from the wound.

3

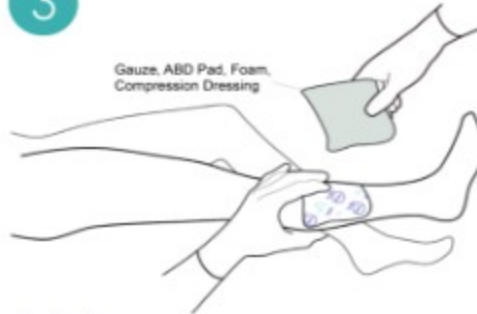

## Add

absorbent secondary dressing on top of the TRITEC dressing (eg gauze, ABD pad, foam, compression dressing).

4



## Secure

both dressings using

iken

E PRODUCTS, LLC



standard methods.