





B650/B653



Seat **x 1**



Leg Extensions **x 4**

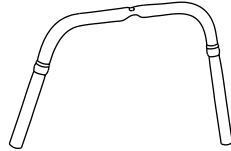


U Bar **x 2**
Labeled "1"
and "2"




Washer **x 5**



Screws **x 5**

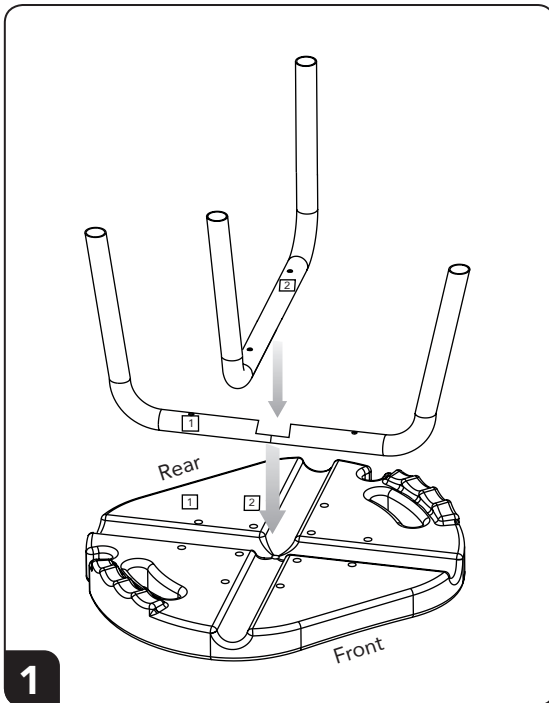


1

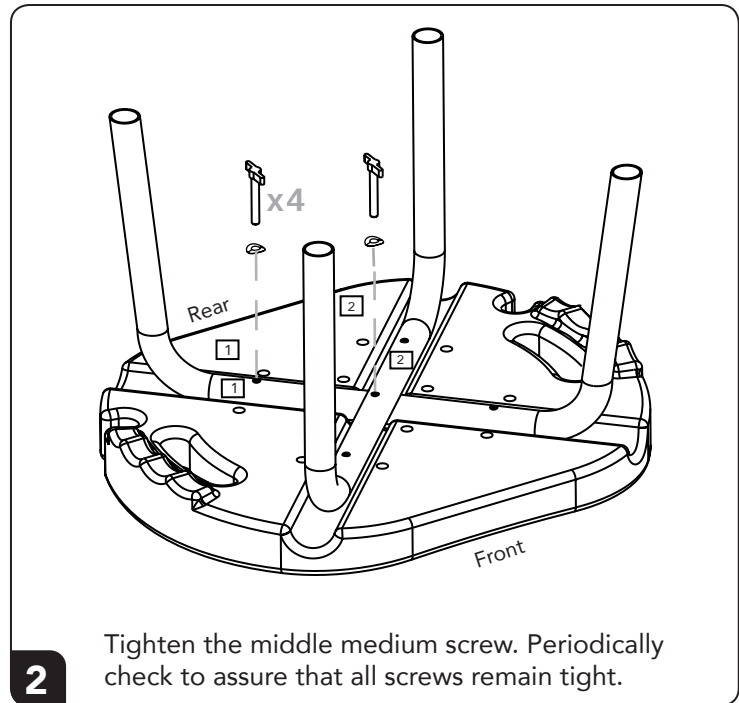


2

Tighten the middle medium screw. Periodically check to assure that all screws remain tight.

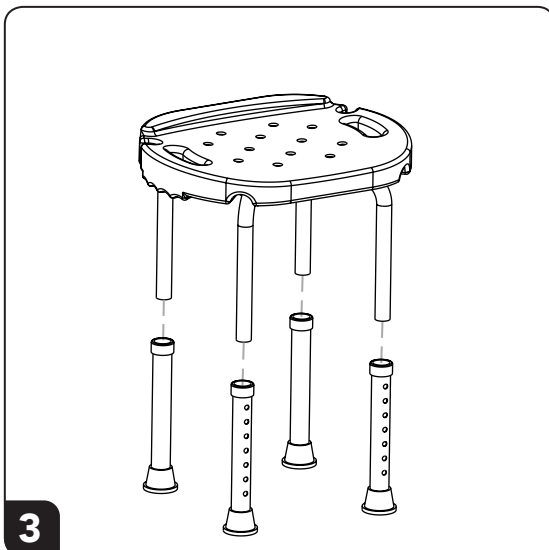

3

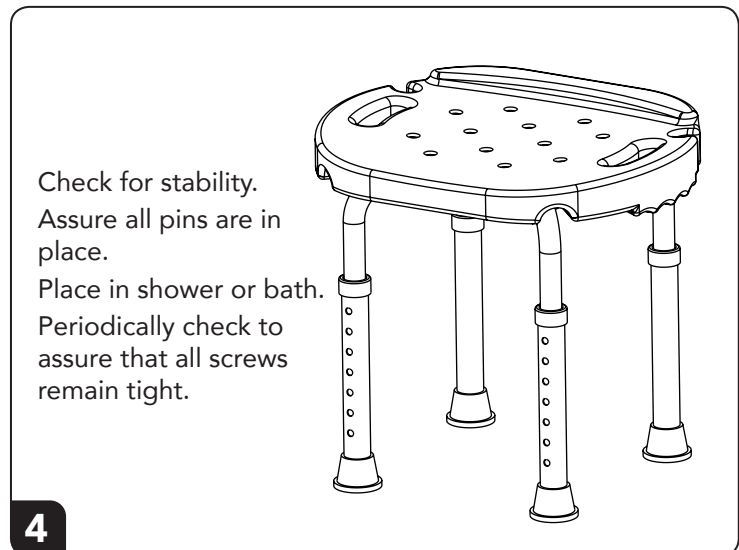

4

Check for stability.
Assure all pins are in place.
Place in shower or bath.
Periodically check to assure that all screws remain tight.