



Patriot Plus

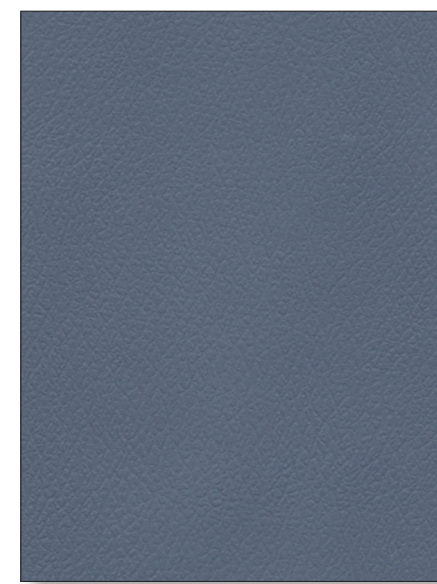


PAT-427 Blueridge

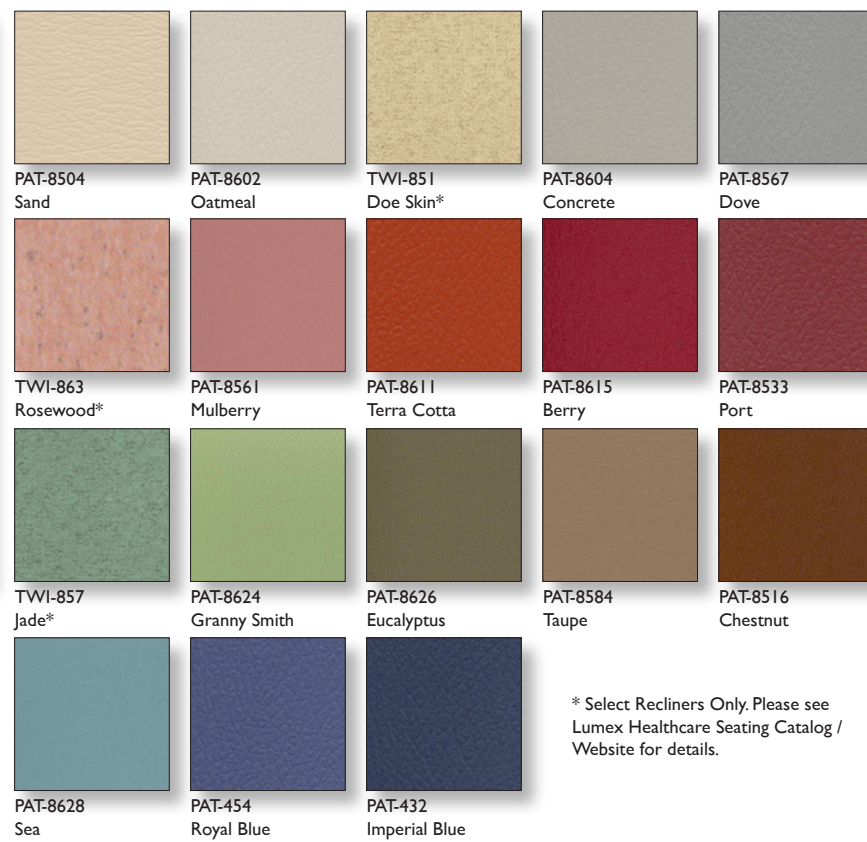


* Select Recliners Only. Please see Lumex Healthcare Seating Catalog / Website for details.


Renaissance

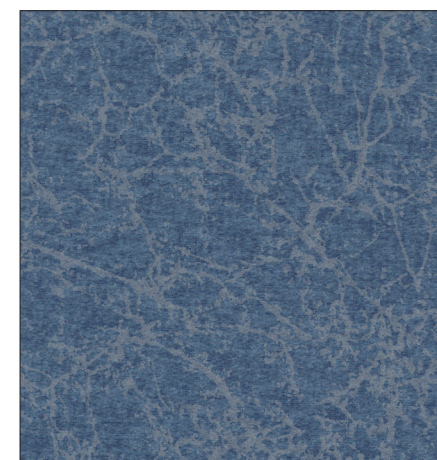


REN-9214 Steel Blue

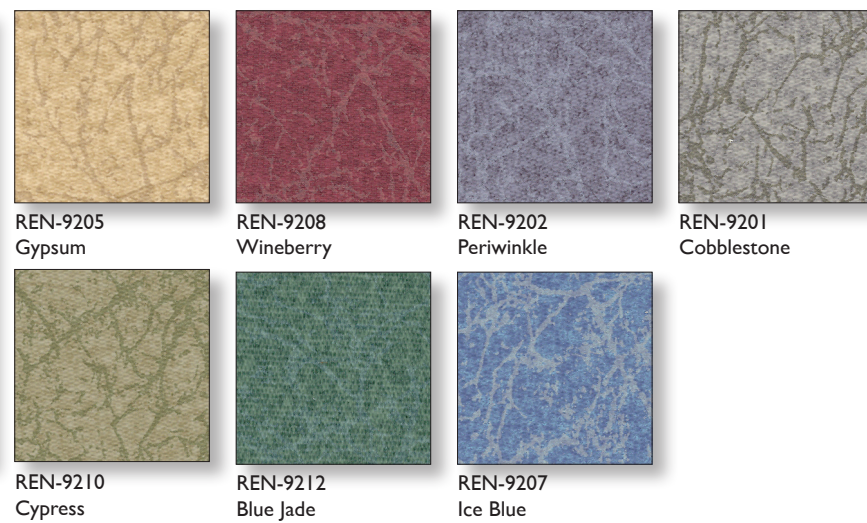


Savoy

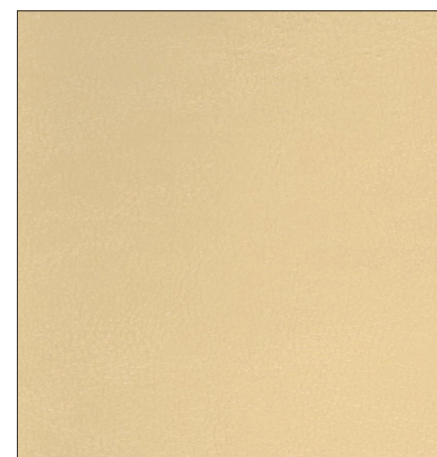

SAV-401 Vintage Gold

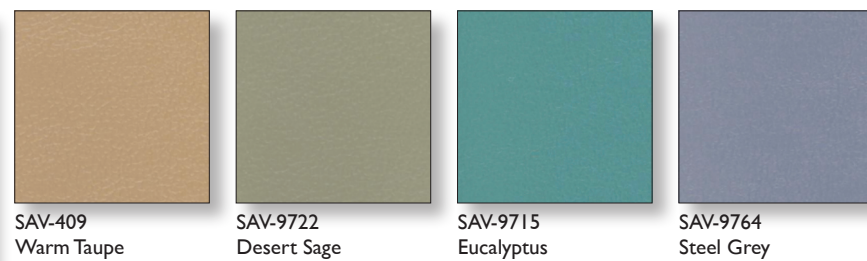


Silvertex

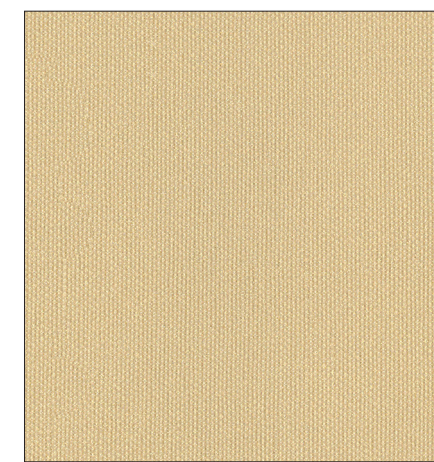


STX-8808 Champagne



Guardian

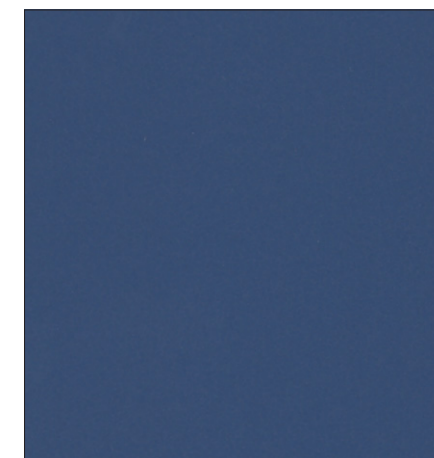

GUA-1323 Moat

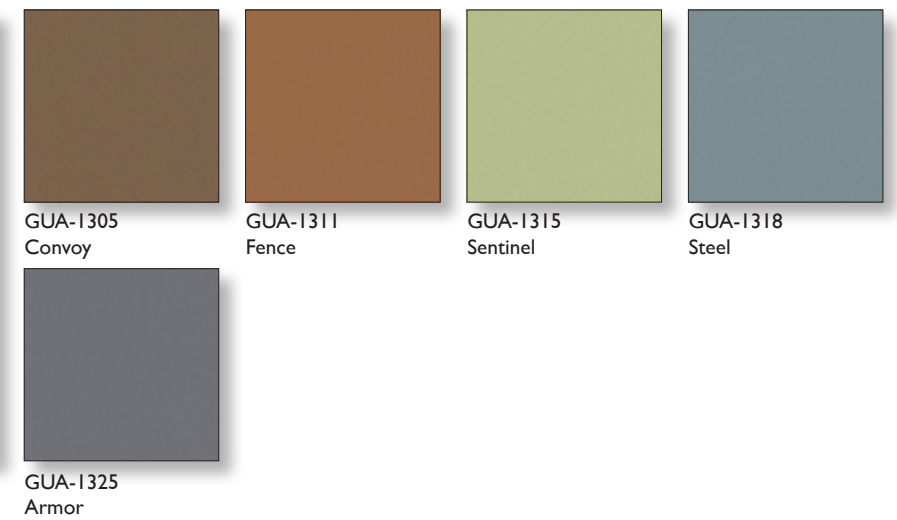

Dolce



DOL-6705 Sand





GF HEALTH PRODUCTS, INC.

THE STANDARD AND SILVERGUARD COLLECTION

Composition

	Dolce	Guardian	Patriot Plus	Renaissance	Savoy	Silvertex
100% Polyester Hi-Loft ² ™ Backing				•	•	•
Polyester/ Cottone Backing			•			
Ultra Hi-Loft ² ™ Polyester Backing		•				
100% Rayon	•					
Weight (oz.)	15	30	34	32	32	30
Roll Size (yd.)	30	30	30	30	30	30
Roll Width (in.)	54	54	54	54	54	54

Codes*

	DOL	GUA	PAT	REN	SAV	STX
Boston Fire Code (Test BFD IX-1)		•	•	•	•	•
CA Tech 117, Section E	•	•	•	•	•	•
CA Tech Bulletin 133			•			
FAR 25.853 (A) Appendix F Part 1(a)(1)(ii)		•	•	•	•	•
Federal St. 191A M 5903.1		•	•	•	•	•
FMVSS 302	•	•	•	•	•	•
IMO FTP 2010 Code MSC.307(88), Part 8, 3.1 & 3.2	•	•	•	•	•	•
NFPA 260 - Class I	•	•	•	•	•	•
Port Authorities of NY & NJ		•	•	•	•	•
UFAC -Class I	•	•	•	•	•	•

Finishes and Treatments

	DOL	GUA	PAT	REN	SAV	STX
PBG+^{PERMABLOK}^{PERMAGUARD}		•				
PERMABLOK³ ADVANCED VINYL PROTECTION		•	•	•	•	•
Ag SILVERGUARD[®] SILVER ION TECHNOLOGY	•	•				•
Antimicrobial Protection	•	•	•	•	•	•
UV Stabilized Pigments (1,000 hrs)		•	•	•	•	•
Abrasion - CFFA-1, ASTM D-4157-02	400k	100k	200k	200k	200k	100k
Wyzenbeek Cotton Duck	Wire Screen	#10	#8	#10	#10	#10
Cold Crack	-10°F	-20°F	-20°F	-20°F	-20°F	-10°F

Applications

	DOL	GUA	PAT	REN	SAV	STX
Corporate Interiors Restaurant Hotel	•	•	•	•	•	•
Casino Sunroom Residential	•	•	•	•	•	•
Healthcare Marine Interior RV Auto	•	•	•	•	•	•



*This term and any corresponding data refer to the typical performance in the specific tests indicated and should not be construed to imply the behavior of this or any other material under actual fire conditions.



GF HEALTH PRODUCTS, INC.

2935 Northeast Parkway
Atlanta, GA 30360

Toll-free: 1.800.347.5678
Fax: 1.800.726.0601

Care and Cleaning Guide**

Treat stains with one of the following steps:	
step 1	eye shadow, mascara, grease, black felt tip pen, crayon, chocolate, and suntan lotion
step 2	red lipstick
step 3	blood, urine, feces, oil base paint, tar and asphalt
steps 4 & 5	all other tough stains

Step 1: Remove excess spill with a damp cloth. Clean with a 1:1 mix of Ivory[®] liquid soap and water. Next, rinse with clean water and dry.

Step 2: Use a straight application of concentrated cleaners such as Formula 409[®] or Fantastik[®] spray cleaner. Wipe with a clean cloth, rinse with water, and dry.

Step 3: Use a 1:1 mix of ammonia and water, or a 1:4 mix of bleach and water. Rinse with clean water and dry.

Step 4: Use a straight application of naphtha (lighter fluid). Rinse thoroughly with clean water and pat surface dry.

Step 5: Use a 1:1 mix of isopropyl alcohol and water. If the stain persists, use straight alcohol. Rinse thoroughly with clean water and pat dry.

Note: For cleaning that requires step 4 or 5, use a soft cotton cloth saturated with the cleaning material and rub the stain in circles 10 times. Pat dry with another soft cotton cloth and check the results.

The information published in this care guide refers to the performance of PermaBlok[®] products in specific tests conducted under laboratory conditions. Results may vary under actual conditions.

This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of vinyl. Spradling, its agents, and assigns assume no responsibility resulting from the use of such cleaning agents to the vinyl.

Certain clothing and accessory dyes (such as those used on denim jeans) may migrate to lighter colors. This phenomenon is increased by humidity and temperature and is irreversible. Spradling International, Inc. will not assume responsibility for dye transfer caused by external contaminants. Please check compatibility when using this product in combination with painted or varnished surfaces.

Formula 409[®] is a registered trademark of the Clorox Company.
Fantastik[®] is a trademark of DowBrands, Inc.
Trademark of the Dow Chemical Co.
Ivory[®] is a trademark of Procter and Gamble.
PermaBlok[®] is a trademark of Spradling International, Inc.
PBG+[®] is a trademark of Spradling International, Inc.
Silverguard[®] is a trademark of Spradling International, Inc.

© 2014 Spradling International, Inc.[®]

Please check compatibility when using this product in combination with painted or varnished surfaces.

**Care and Cleaning Guide excludes Dolce and Guardian.

Please visit spradlingvinyl.com/research_center for the Polyurethane Fabric Cleaning Guide and the PBG+ Cleaning Guide.

Some products may contain chemicals, identified by the State of California as a cause of cancer; birth defects or other reproductive harm at certain exposure levels. Under the California law known as "Prop 65", certain warnings to consumers in California are required where such products are sold. The presence of such chemicals in coated fabric products, even at extremely low concentrations, can lead to disputes over Prop 65 warning obligations that are very difficult to resolve. If your company intends to introduce Spradling vinyl products into commerce in California, Spradling recommends that you take steps to confirm whether the warning requirements of California's "Prop 65" are applicable to the products in question and whether your company is complying with those warning requirements for the chemicals contained within these products.